

## PSR-S-86T

Remote 4 channels 433,92MHz



### Technical Characteristics

Frequency =433,92MHz

Power = 10mW

Type of battery = **12V - 23 A**. To change the battery, there are 2 slots on the sides of the remote. Insert a test screwdriver into one of these slots and the remote opens. On the back side of the remote you see the battery. You should replace it with the same polarity as the previous one.



### Wireless remote-control storing:

The gate must be completely closed or fully open. Press and hold the remote control that operates the door and hold it down until the gate stops (approximately 6-7 seconds). Release it immediately and within 3 seconds, press only the NEW remote control. Check that the new remote control is working otherwise repeat the process from the beginning.

### Store a remote control to the memory of the control board:


Press the code button and as soon as the red indicator lights up, release it immediately. The red indicator light stays on for only 3 seconds. During this time, before switching off, press a button on the new remote control. The indicator flashes. The remote control is saved.

### The specific procedure refers to the Profelmnet control boards rolling code.

Before the above procedure you should first confirm that the Unique Rolling Code is compatible with that of the NEW remote you have purchased. Otherwise, your NEW remote will not be saved to your control board.

### Where the user can find the UNIQUE rolling code ?

Open the remote, and find the below production Profelmnet sticker

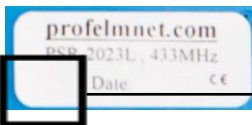

This is the UNIQUE rolling code of the remote