

5614
USER
MANUAL

EASYTECH PRO





THE POWER TO MOVE

SERIES 56

Series 56 is a complete series of PROFELMNET control boards, with integrated Bluetooth technology. Compatible with Profelmnet Easy Tech application that is available in IOS and Android. The installer is able to access and adjust all the functions of the control board through the smartphone, tablet or laptop.

The models of series 56 are :

- 5633 control board for sliding and swing gate, roller shutter, barrier 230VAC
- 5650 control board for sliding amd swing gate, barrier, pergolas 24VDC
- 5614 control board for double motors 230VAC
- 5651 control board for double motors 24VDC

CE Declaration of Conformity

The manufacturer **L. PSARROS & SIA OE** declares that the products **5650, 5633, 5614, 5651** are according to European Directives requirements of **RADIO EQUIPMENT DIRECTIVE (RED) 2014/53/EU** and **ELECTROMAGNETIC COMPATIBILITY EMC 2004/108/EC**


Profelmnet
Λ. ΨΑΡΡΟΣ ΚΑΙ ΣΙΑ Ο.Ε.
ΕΙΣΑΓΩΓΕΣ – ΚΑΤΕΛΕΓΜΕΝΤΑ ΥΛΙΚΟΥ
ΑΓ. ΔΗΜΗΤΡΙΟΥ 286Α Τ.Κ. 11527 ΑΓ. ΔΗΜΗΤΡΙΟΥ
ΑΦΜ: 800845047 ΔΟΥ ΑΓ. ΔΗΜΗΤΡΙΟΥ
ΑΡ. ΓΕΜΗ: 142769401000
ΤΗΛ.: 210 9850244 / FAX: 210 9823264

Labros Psarros
Electronics Engineer
Technical Director


Warning for the installer

1. **ATTENTION!** To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people
2. Carefully read the instructions before beginning to install the product
3. This product was designed and built strictly for the use indicated in this documentation Any other use, not expressly indicated here, could compromise the good condition/operation of the product and/or be a source of danger
4. Store these instructions for future reference
5. Before attempting any job on the system, cut out electrical power
6. Make sure that a differential switch with threshold of 0.03 A is fitted upstream of the system
7. Do not in any way modify the components of the automated system
8. Do not allow children or adults to stay near the product while it is operating
9. Keep remote controls or other pulse generators away from children, to prevent the automated system from being activated involuntarily
10. The user must not attempt any kind of repair or direct action whatever and contact qualified personnel only
11. Profelmnet as a manufacturer reserves the right to make changes to the product without notice
12. Anything not expressly specified in these instructions is not permitted


5614 Control board for double motors 230VAC

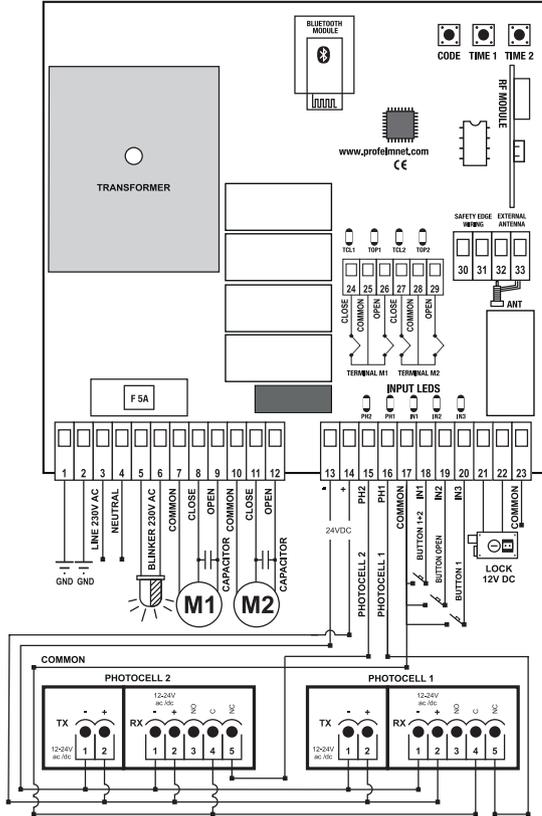

MECHANICAL SAFETY EDGE (NC CONTACT)



SAFETY EDGE WIRING TYPE 8K2



WIRING EXTERNAL ANTENNA




TECHNICAL CHARACTERISTICS

Power supply	230VAC /50 Hz
Max. Motor power	1400W
Box dimensions	25cm X19.5cm X10cm
Control board dimensions	13cm X13.5cm X 4.5cm
Fuse 230VAC	5A
Fuse 12-24VDC	200mA
Blinker light power supply	230VAC/100W
Photocell power supply	24VDC
Lock power supply	12VDC /3A
Remotes memory	Removable memory up to 300 remotes
Temperature	-20oC + 60oC

ELECTRICAL CONNECTIONS

1	Ground	17	Common accessories
2	Ground	18+17	Command Button 1+2 - N.O
3	Line	19+17	Command Magnetic Loop - N.O
4	Neutral	20+17	Command Only Motor 1 N.O
5-6	Blinker light	21+22	Lock 12VDC 3A
7	Common motor 1	23	Common
8	Close Motor 1 + Capacitor	24+25	Close terminal switch motor 1-N.C
9	Open Motor 1 + Capacitor	25	Common terminal switch motor 1
10	Common motor 2	26+25	Open terminal switch motor 1-N.C
11	Close Motor 2 + Capacitor	27+28	Close terminal switch motor 2-N.C
12	Open Motor 2 + Capacitor	28	Common terminal switch motor 2
13	Power Supply - 24VDC	29+28	Open terminal switch motor 2-N.C
14	Power Supply + 24VDC	30+31	Safety Edge - NC /8K2
15+17	Photocell 2	32	External Antenna 433,92MHz
16+17	Photocell 1	33	Shield Antenna 433,92MHz

ACTIVATE INTERNET AND BLUETOOTH  OF YOUR DEVICE
DOWNLOAD THE PROFELMNET EASYTECH PRO APPLICATION


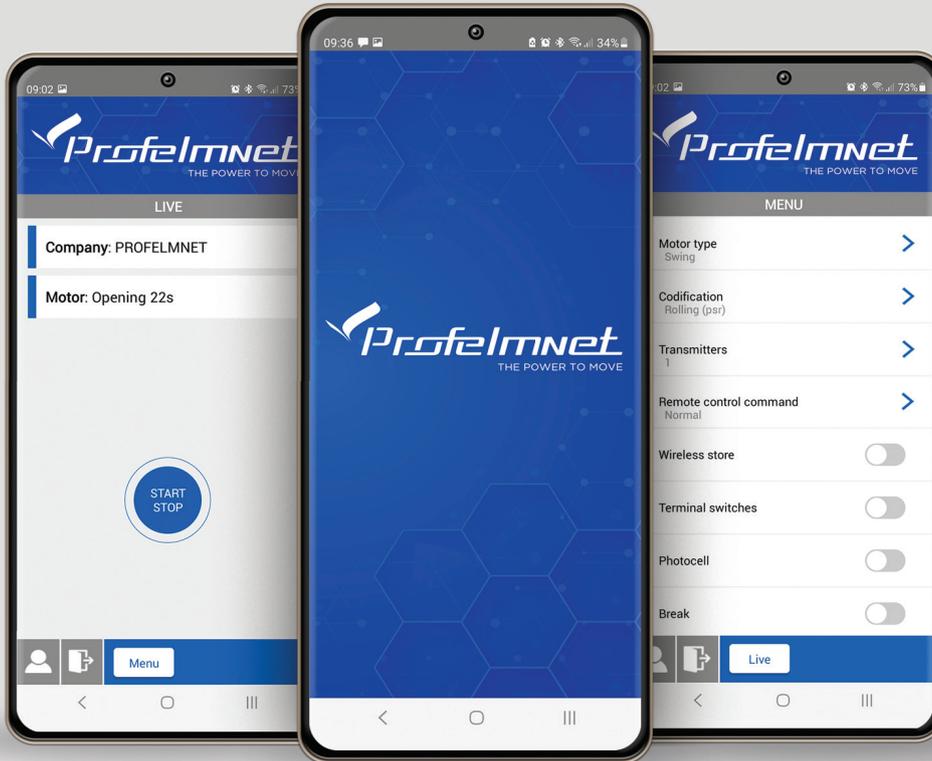


ProfelmNet
EasyTech Pro



REGISTER


FOLLOW THE STEPS TO REGISTER

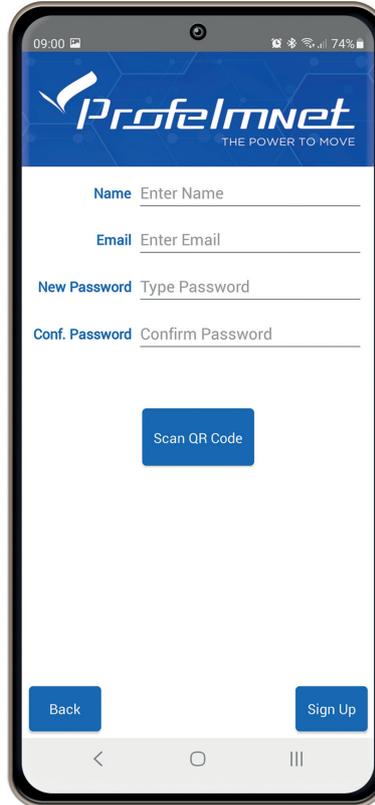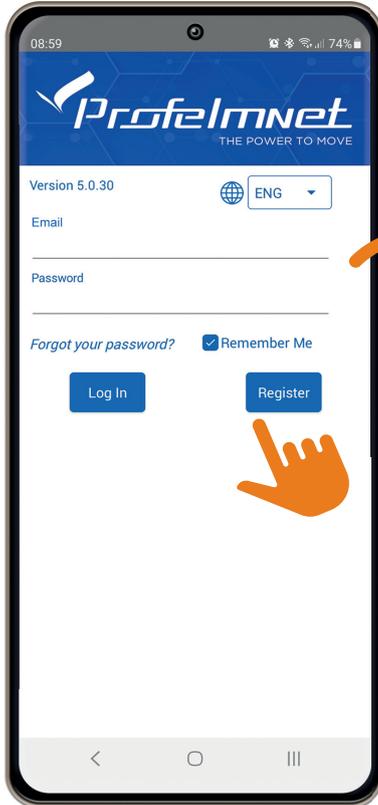

- 1 Choose the language
- 2 Press Register & fill in your personal data
- 3 Scan QR code. Find the QR code on the board & scan it
- 4 Press sign up to finish



CONNECTION with the board

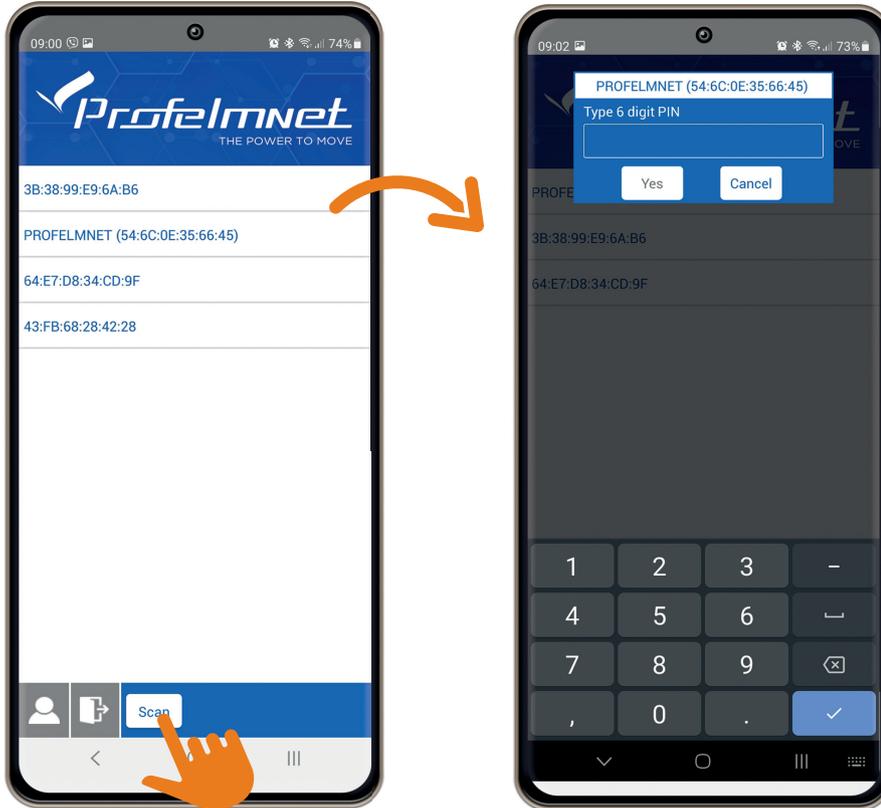


- 1 Press scan to find the PROFELMNET device
- 2 Choose the PROFELMNET device
- 3 Type the 6 Digit PIN

During the first connection, type OOOOOO PIN and then type your personal 6-digit PIN.

i The PIN code is your personal security number. Without this PIN code, you can not access the board. Avoid using simple easy PIN codes (i.e 111111)

LIVE SCREEN

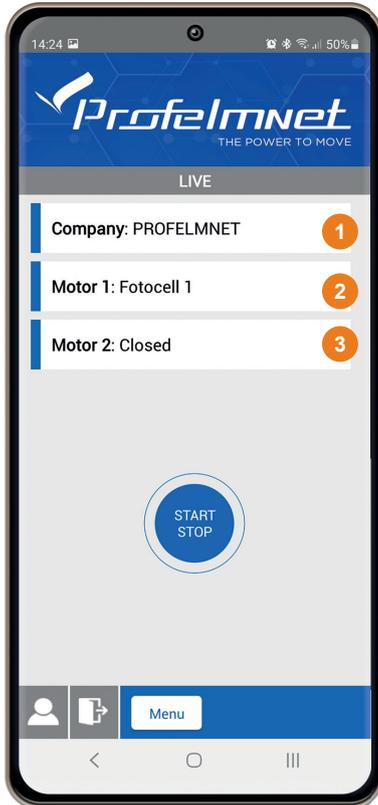



- 1 Company:
Board Supplier
- 2 Motor 1:
Installation Info
- 3 Motor 2:
Installation Info





USER PROFILE:
Edit your personal data

SWITCH LIVE SCREEN TO MENU SCREEN

Download the complete manual configuration

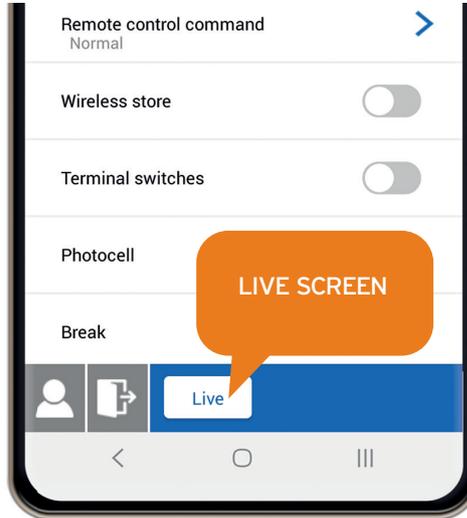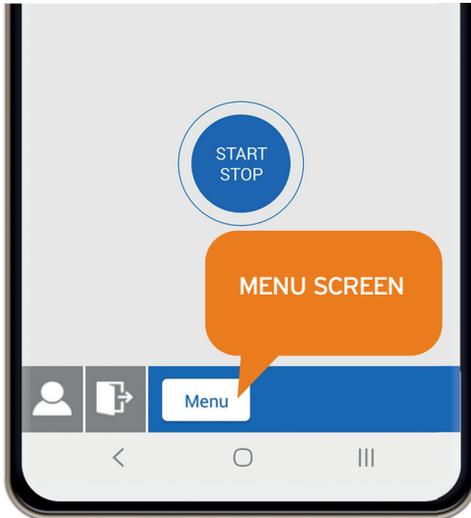


MENU: Codification

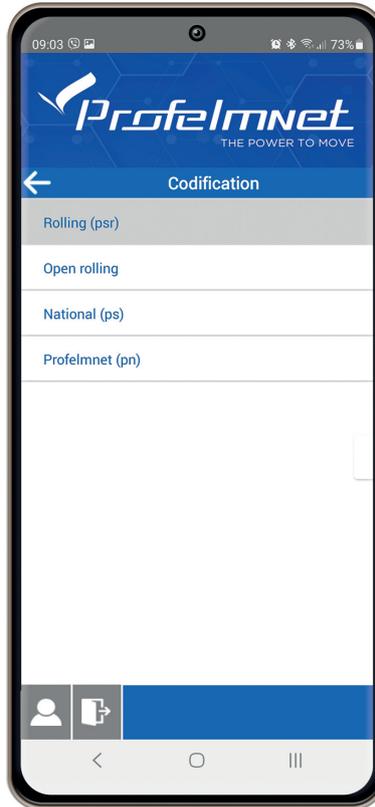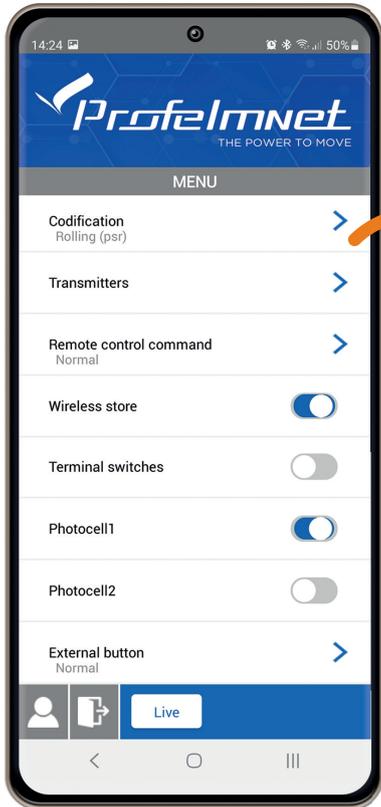

Codification: Select based on the installation's transmitters

MENU: Transmitters

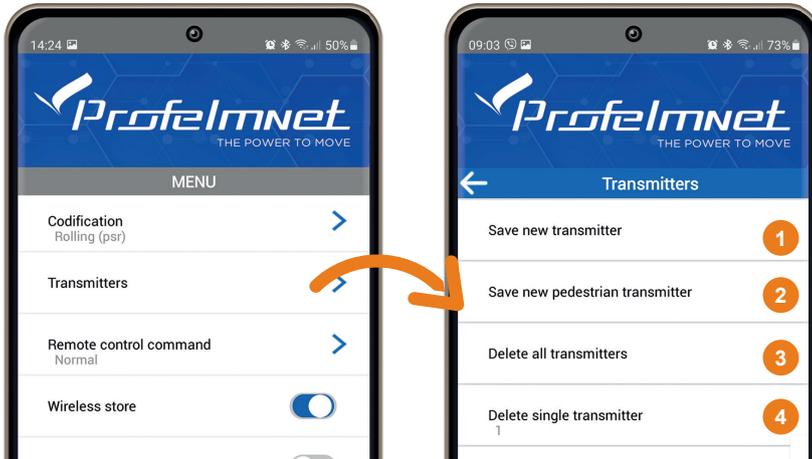

- 1 Save new transmitter:**
Press the transmitter button you want to save
- 2 Save new pedestrian transmitter:**
Press the transmitter button you want to save as pedestrian
- 3 Delete all transmitters:**
YES/NO
- 4 Delete single transmitter:**
Choose the number of transmitter to DELETE.

Adding a new remote remotely: The motor is fully closed or open. Press a working remote button (already in memory) to start the motor working and hold it pressed until the motor stops. When it stops, leave it and press the new remote button immediately. The new remote is saved. Repeat steps to program more remotes remotely. When the memory is full (300 remotes) you cannot add more new remotes

TIP

COMPATIBLE REMOTES: Based on the model you have

PS: Fixed Code 433,92MHz. Compatible remotes are fixed code 433,92MHz



PSR/PN: Rolling Unique Code 433,92MHz. Compatible Remotes with same Unique Rolling Code.

WHERE YOU FIND THE UNIQUE ROLLING CODE OF THE BOARD: On the control board, there is a white productions sticker by Profelmnet. You will find the Unique Rolling Code, with which you search for compatible controls.

TIP

ADDING A NEW TRANSMITTER WITH THE CONTROL BOARD CODE BUTTON: Press the CODE button and the RED indication light goes ON. Leave it and during the next 3 seconds, press the desired transmitter channel button until the RED indication light blinks and goes OFF. The new transmitter is saved. Follow the same procedure to program more (up to 300 remotes) new remotes.

MENU: Remote control Command

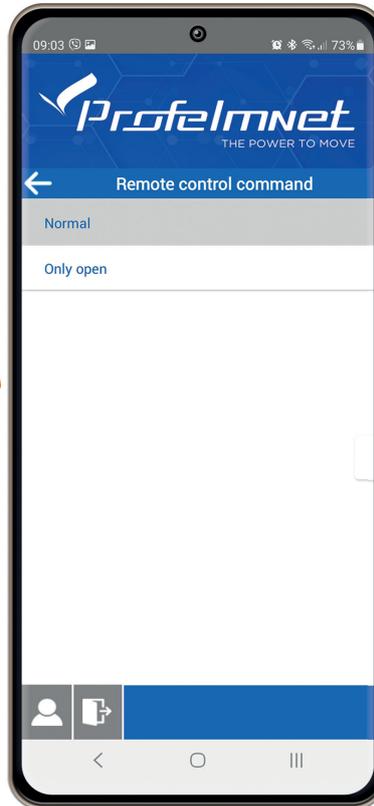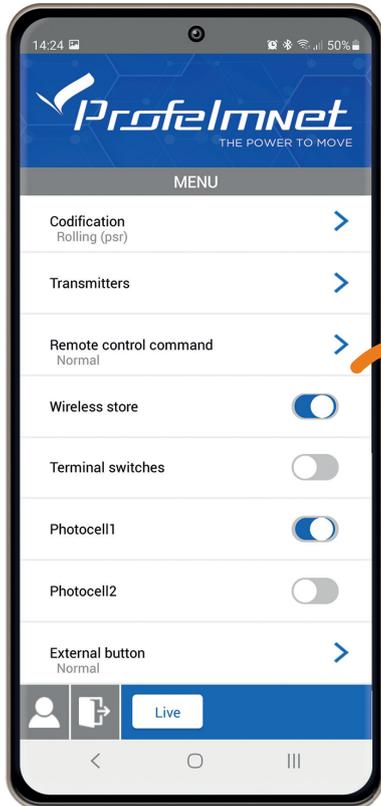


Remote control command


Normal:
START-STOP-CLOSE

Only Open


MENU: Settings ON/OFF

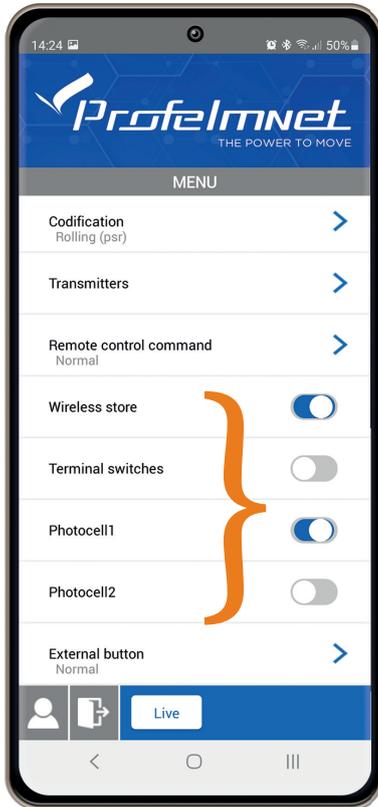

MENU: Lock

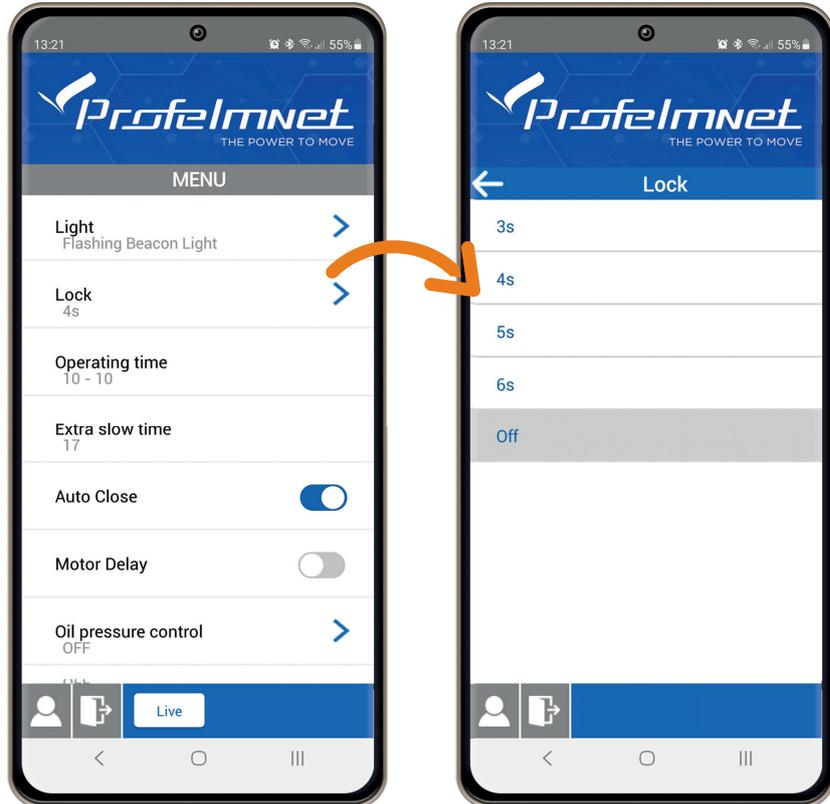



MENU: External Button

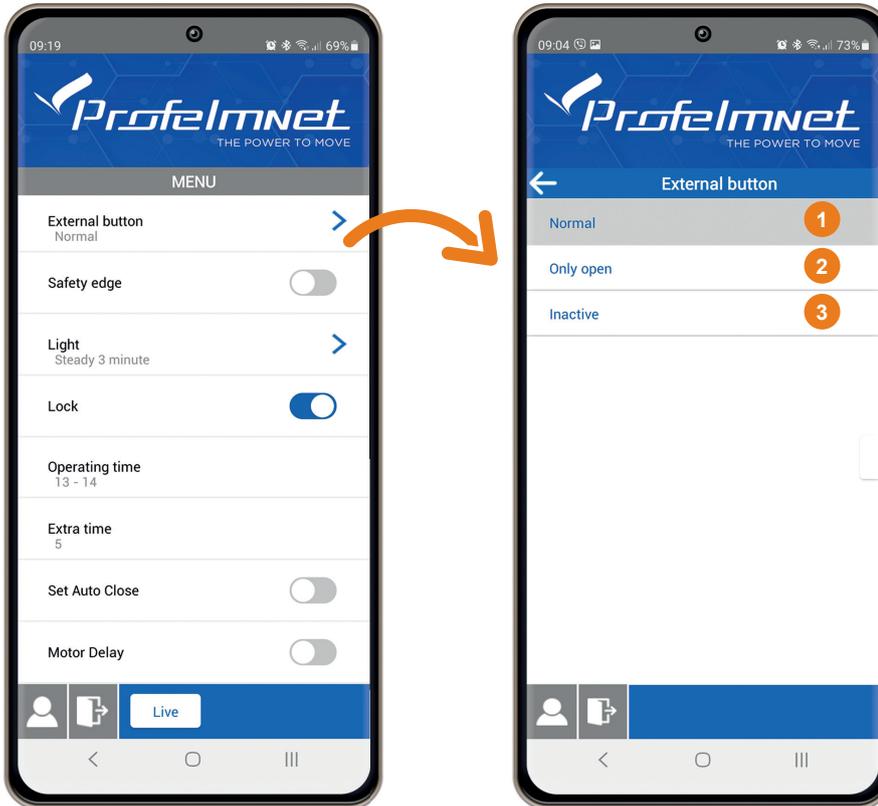

External Button: Select based on the installation

- 1 NORMAL
- 2 ONLY OPEN
- 3 INACTIVE

MENU: Flash

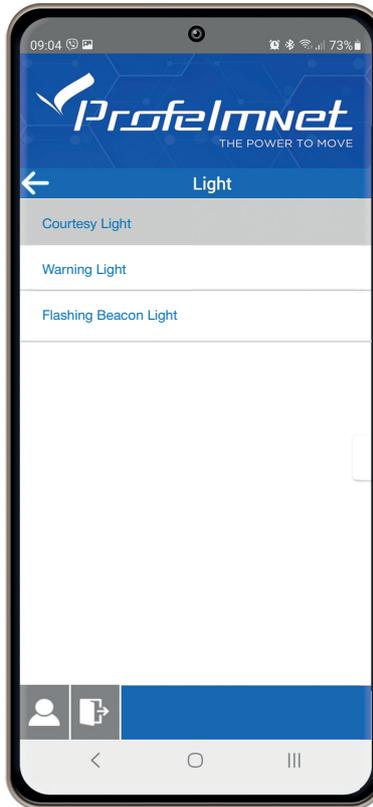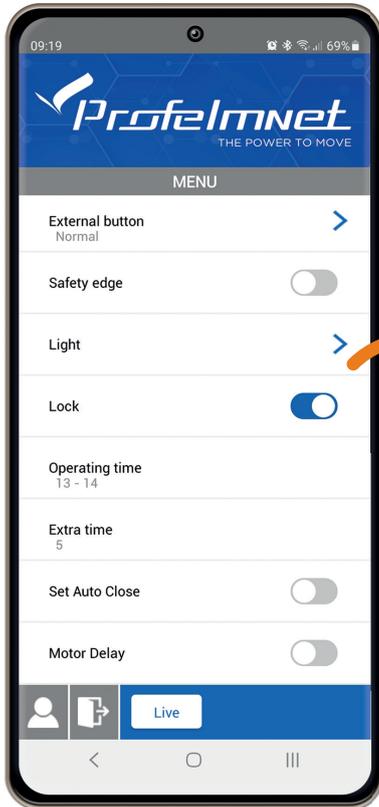


COURTESY LIGHT: The light is steady for 3 minutes after the last command.

WARNING LIGHT: The light indicates the status of the gate.
Light Off, gate is closed
Light On, gate is open
Slow Flashing, gate is opening
Fast Flashing, gate is closing




FLASHING BEACON LIGHT: The light is flashing during the cycle of the motor.

SELECTION CONFIRMATION

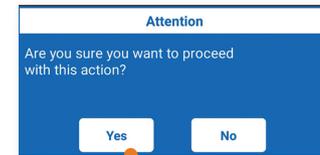

MENU: Operating time - motor 1 & motor 2

Follow the application steps

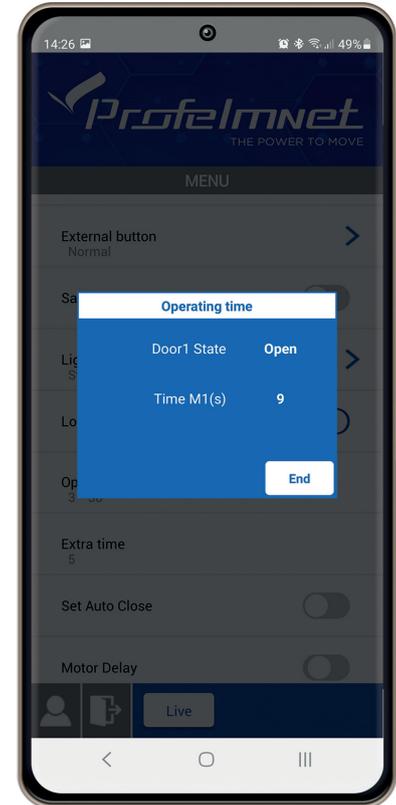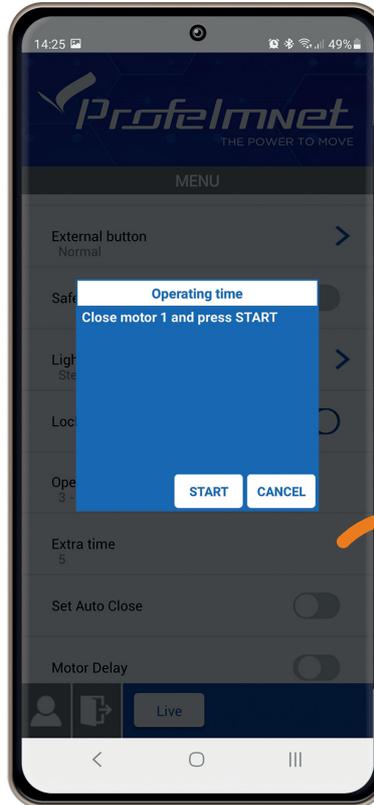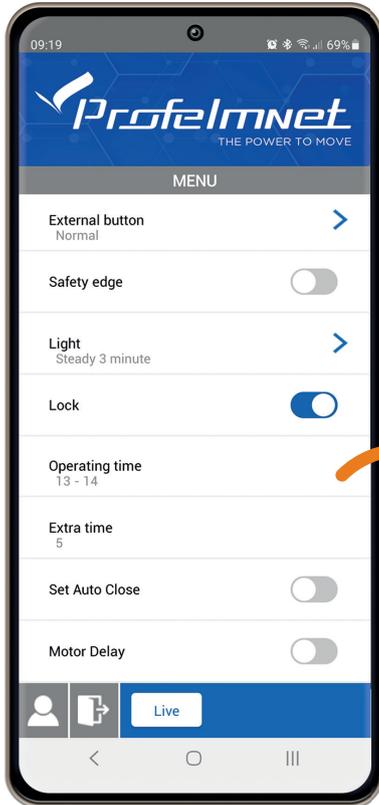

Operating Time: FROM THE CONTROL BOARD

**SAME WORKING TIME FOR OPEN + CLOSE
FOR EACH LEAF**



Before setting the working time of the motors, make sure that you have installed PHYSICAL STOPS at the closing and opening of each leaf, otherwise the control board cannot be adjusted correctly. In case there are no physical stops, your motor must have built-in MECHANICAL STOPS.

1ST METHOD: THROUGH CONTROL BOARD

- 1 Use the Buttons TIME 1 + TIME 2
BOTH LEAVES ARE CLOSED.

Press and hold pressed the TIME 1 button until the first leaf is fully opened.

Press and hold pressed the TIME 2 button until the second leaf is fully opened.

The operating time of the two Motors have now been set.

2ND METHOD: THROUGH REMOTE

- 2 Use the saved remote or the external button
BOTH LEAVES ARE CLOSED.

Press the TIME 1 + TIME 2 buttons simultaneously. The red LED indicator starts flashing.

Press the remote.

Motor 1 opens.

When Motor 1 is fully open, press the remote again.

Motor 1 stops and Motor 2 starts opening automatically.

Press the remote when Motor 2 is fully open.

The operating time of the two Motors have now been set.

Operating Time: **FROM THE CONTROL BOARD**

DIFFERENT WORKING TIME FOR OPEN + CLOSE FOR EACH LEAF

1ST METHOD: THROUGH CONTROL BOARD

1 Use button TIME 1
BOTH LEAVES ARE CLOSED

Press the CODE + TIME 2 buttons simultaneously. The red LED indicator starts flashing quickly.

Press the TIME 1 once.

The Motor 1 opens.

When Motor 1 is fully open, press the TIME 1 once.

Motor 1 stops and after 1 second, Motor 2 starts opening automatically.

When Motor 2 is fully open, press the TIME 1 once.

Motor 2 stops and after 1 second, Motor 2 starts to close automatically.

When Motor 2 completely closed, press the TIME 1 once.

Motor 2 stops and after 1 second, Motor 1 starts to close automatically.

When Motor 1 completely closed, press the TIME 1 button once.

The operating time of the two Motors have now been set.

2ND METHOD: THROUGH REMOTE

1 Use the saved remote or the external button
BOTH LEAVES ARE CLOSED

Press the CODE + TIME 2 buttons simultaneously. The red LED indicator starts flashing quickly.

Press the remote once.

The Motor 1 opens.

When Motor 1 is fully open, press the remote once.

Motor 1 stops and after 1 second, Motor 2 starts opening automatically.

When Motor 2 is fully open, press the remote once.



Motor 2 stops and after 1 second, Motor 2 starts to close automatically.

When Motor 2 completely closed, press the remote once.

Motor 2 stops and after 1 second, Motor 1 starts to close automatically.


When Motor 1 completely closed, press the remote once.

MENU: Deceleration time

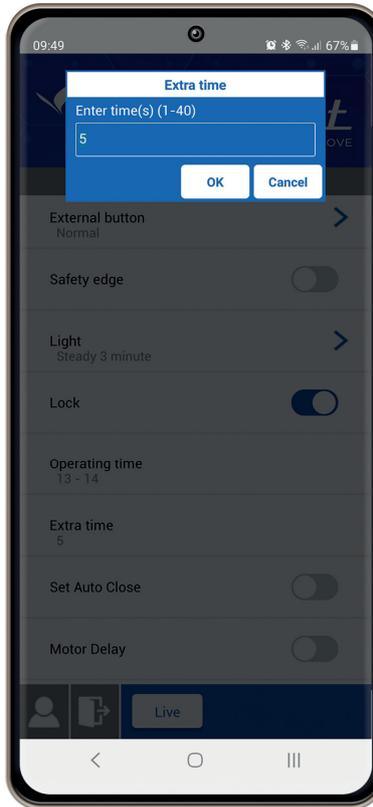
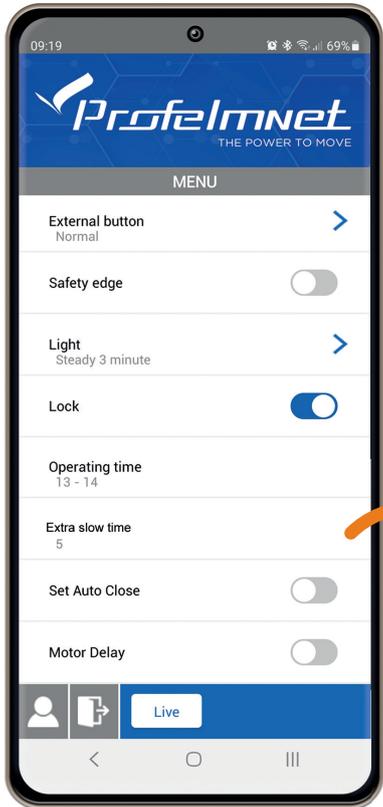


Deceleration time:
Select based on the installation

SELECTION CONFIRMATION

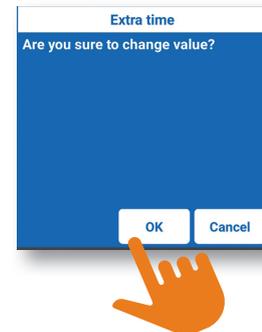

MENU: Set auto - close

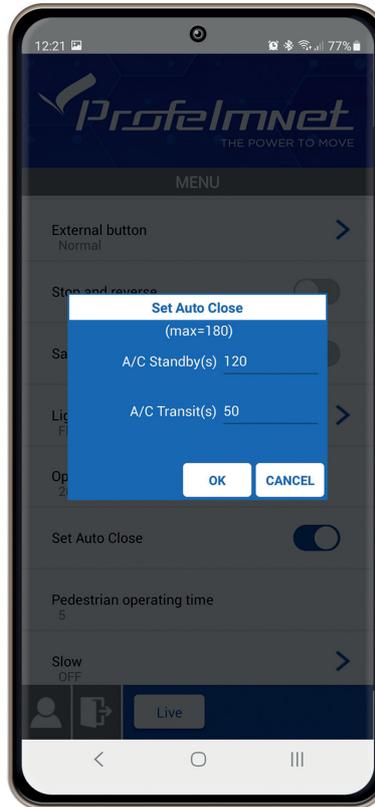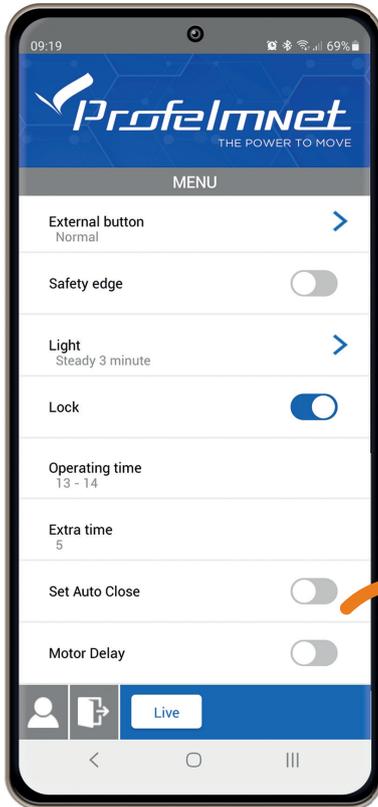

- **Auto-Close Stand-by:**
The time when the gate is open and the photocell is not activated
- **Auto close Transit:**
The time when gate is open after the photocell is activated





SET TIME:

Set time on each field in seconds

If you want to edit the time, you need to disable the AUTO-CLOSE and re enable it

OFF ON

MENU: Deceleration

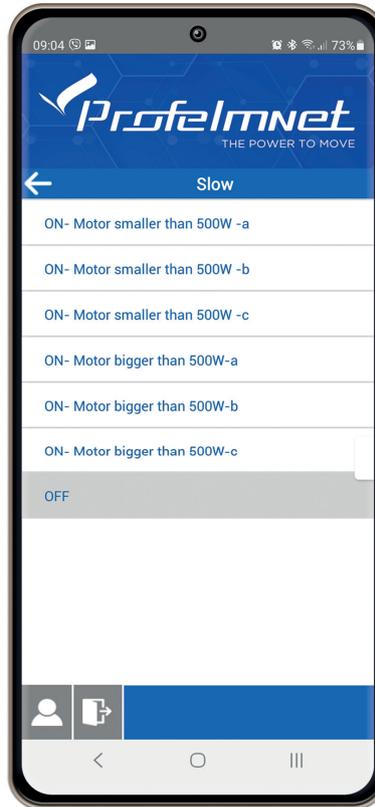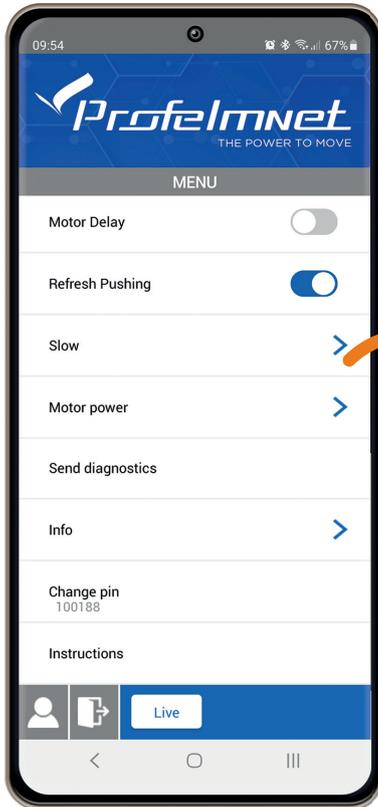

DECELERATION



Select based on the installation



Recommended Factory Settings:

- 1. Motor less than 500 watt:
Choice A*
- 2. Motor more than 500 watt:
Choice A*

MENU: Motor Power

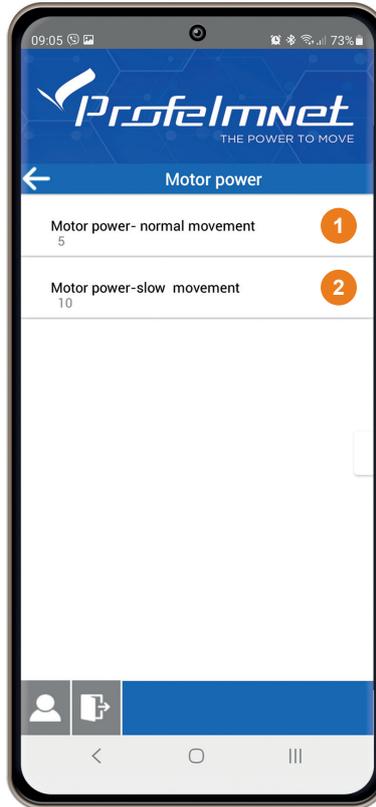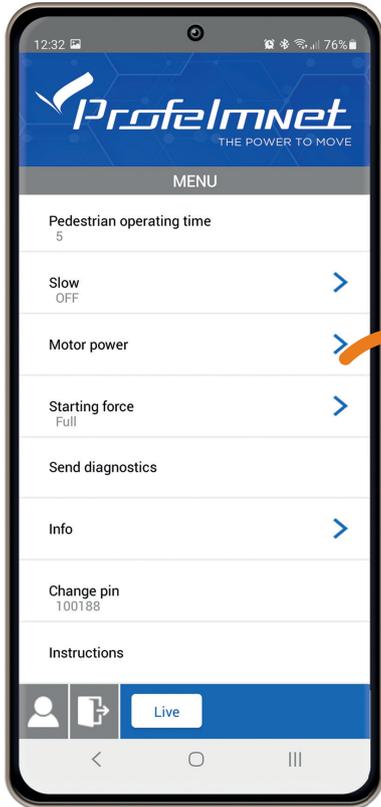

- 1 Motor power - normal movement:
Enter value
- 2 Motor power - slow movement:
Enter value

ENTER VALUE:



Motor power- normal movement

Enter value (1-10)

5


OK Cancel

MENU: Send Diagnostics

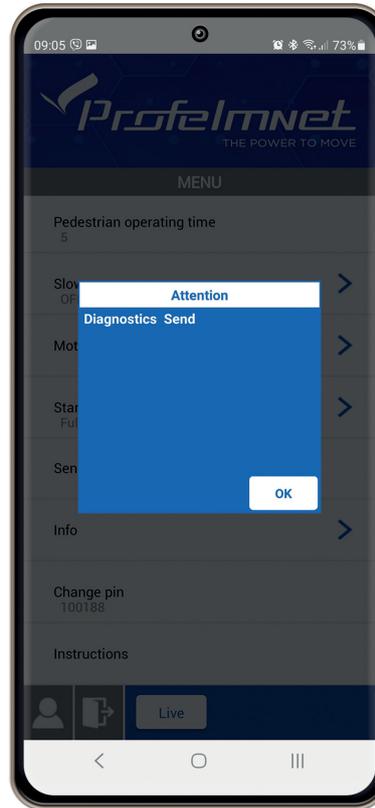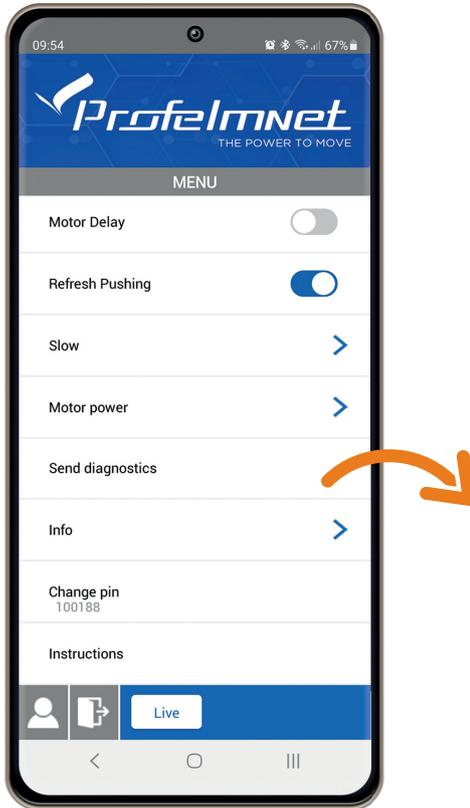



In case of technical support, send diagnostics to the Profelmnet technician

MENU: Info

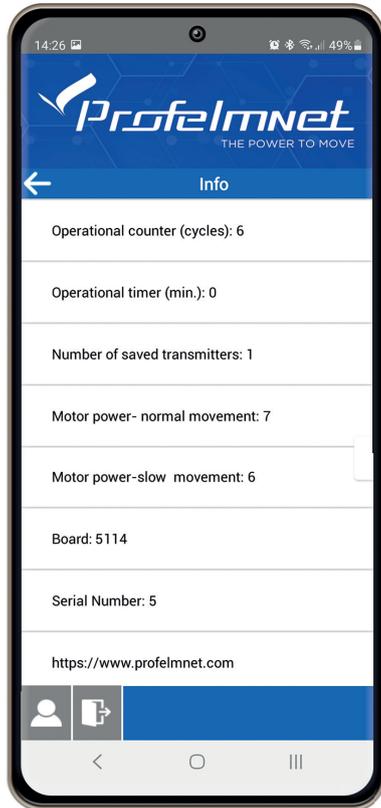


All information of the board

MENU: Change PIN

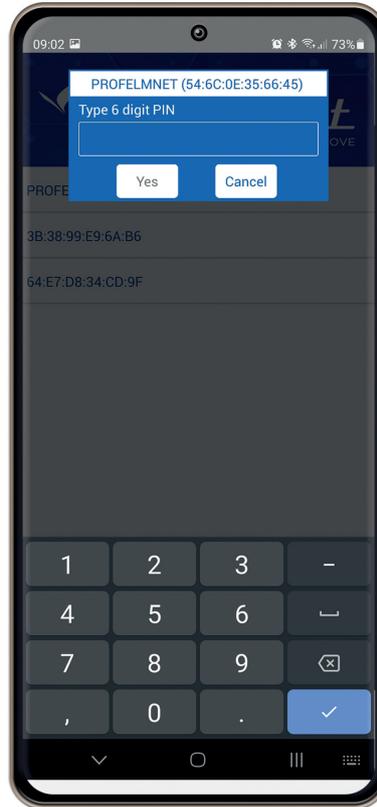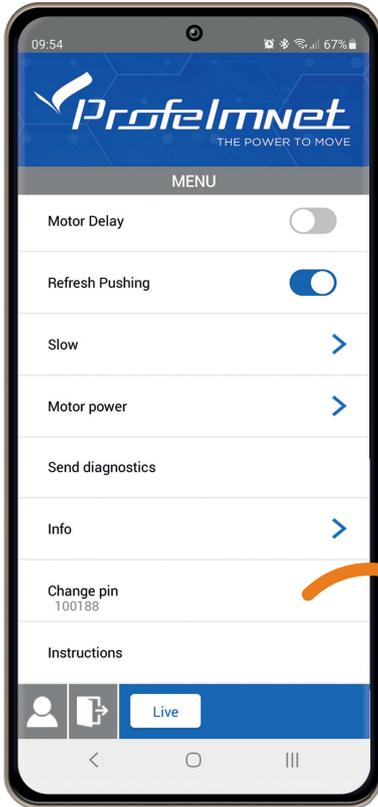

SELECTION CONFIRMATION

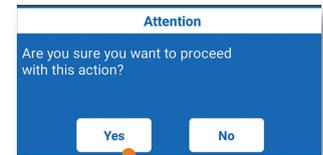



www.profelmnet.com